


PREP YOUR BUSINESS and EQUIPMENT ROOM


Your guide to a hassle-free installation



Having your **power ready** is critical for the date of installation.

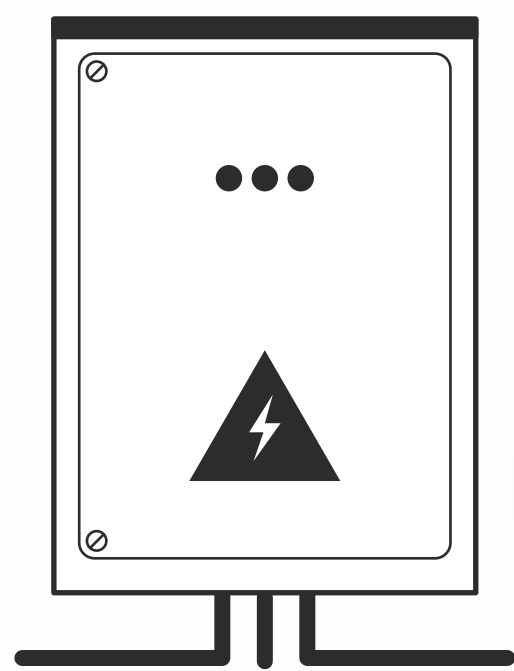


Breaker panel

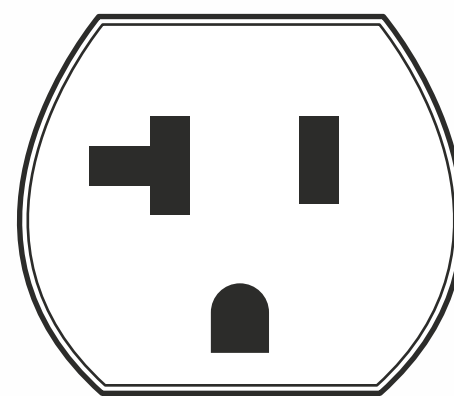

Prep your **T-Max** system before installation!

1

Determine how many equipment rooms need to be prepped.

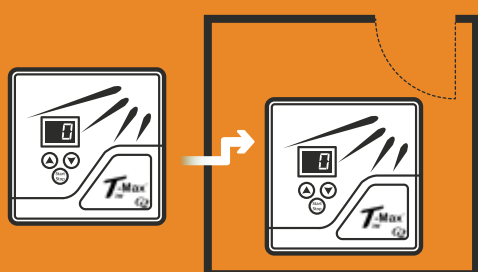

For 2 or less rooms use a front desk to room connection.



For more than 2 rooms use a daisy chain connection.


2

Purchase the proper materials.

4-wire flat phone cable

RJ22 Modular Jack

Purchase T-Max cable from ProSun or get 4-wire flat phone cable with RJ22 modular jack.

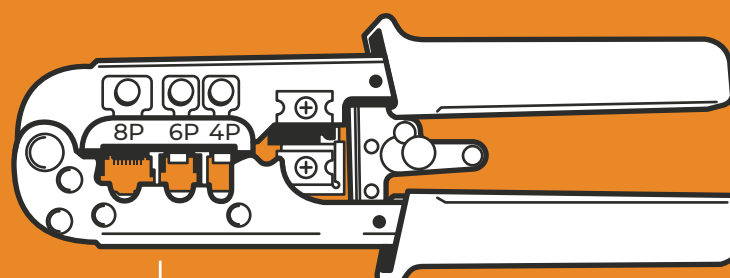

Crimp tool


If getting your own cable get the RJ22 crimp tool. Make sure you put the ends in a straight wire pattern (where the wires line up the same on each end where the jack is crimped on).



Bad crimp = faulty T-Max connections

3

Run the cable connections.

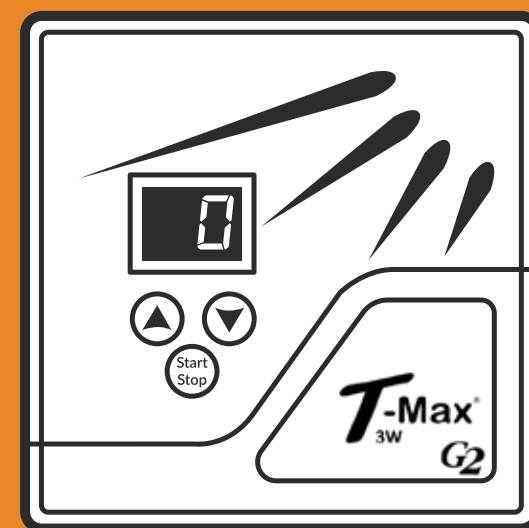

All T-Max cables must be ready and in place prior to installation.

For single room : Start at front counter and run to the individual rooms, clearly labeling the room #'s.


For daisy chain : Start at front desk to room 1, room 1 to room 2, room 2 to room 3, room 3 to room 4 etc.



Room configuration may differ based on room #'s or location. Cables should start at front counter and make a logical path to the last room in the chain.

Let's get your equipment room

READY!

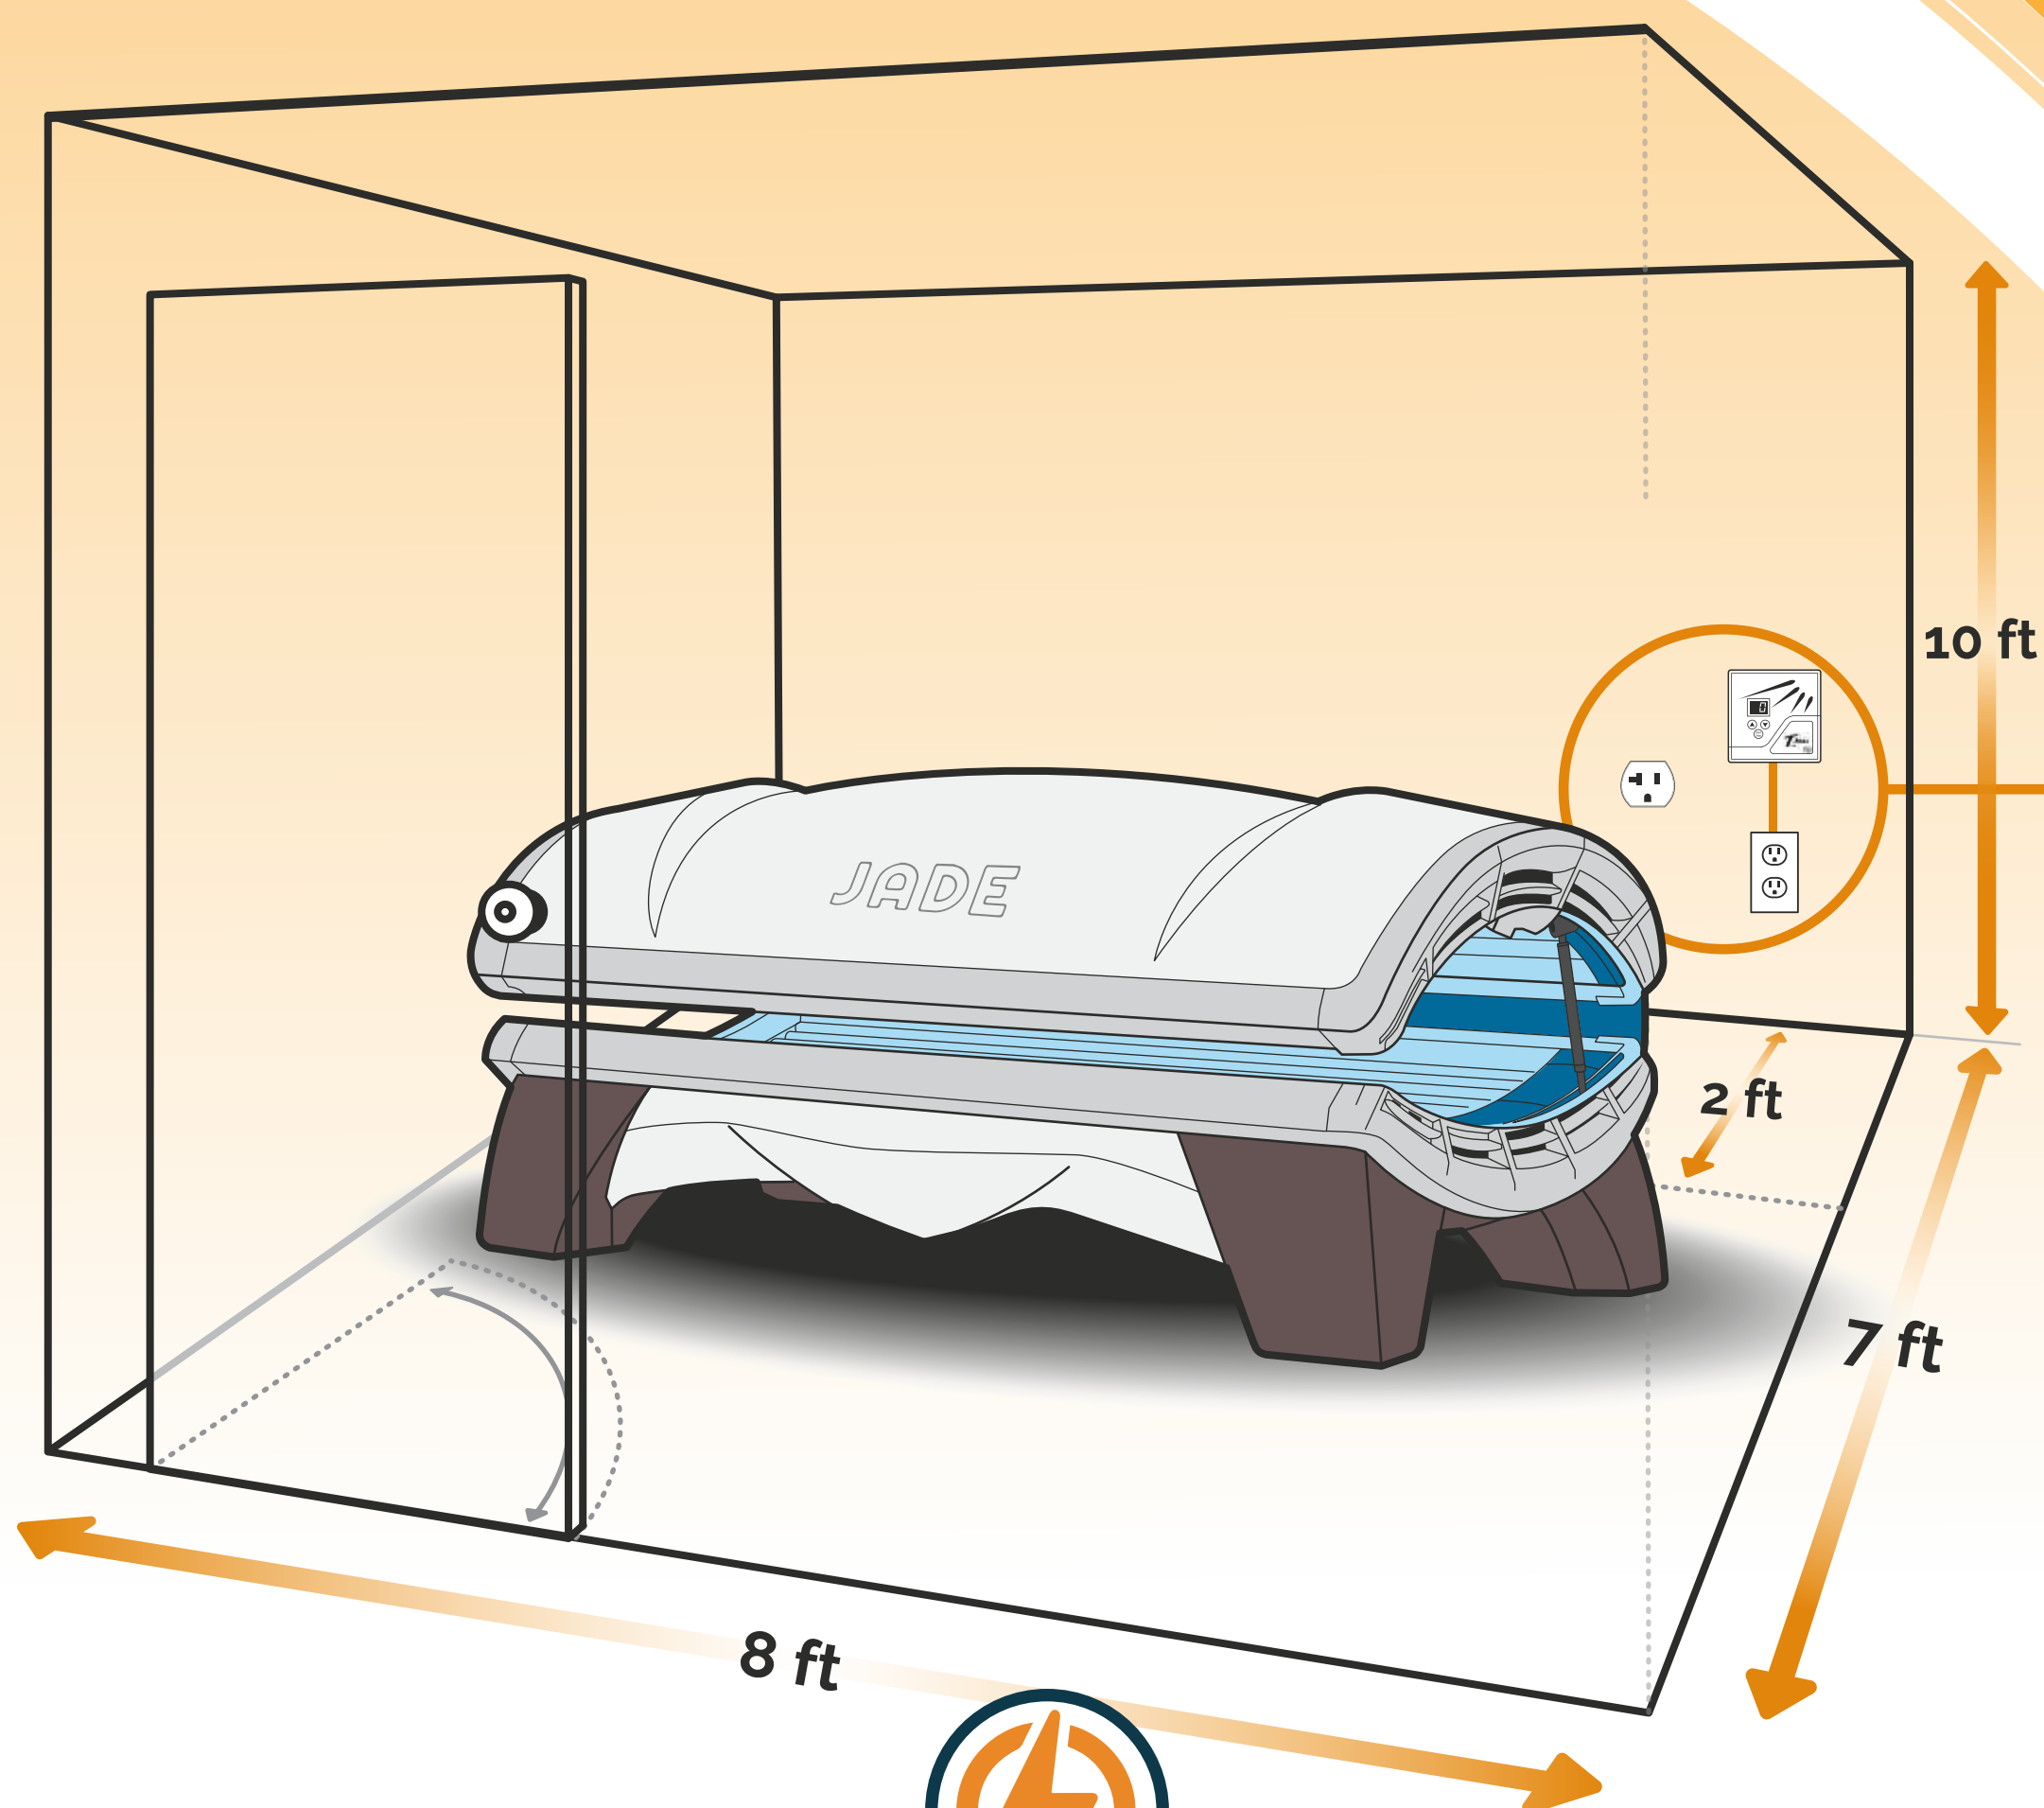



Prosun Jade Models

- Recommended room size: 8ft x 7ft
- AC requirements: BTU 6000 A/C
- Breaker size requirements: Single Phase - 20amp
- 110V Outlet required for T-Max





T-Max can be located to the side the unit where it is accessible to customers to override the delay time.

Disclaimer: All information provided is a suggestion for best layout but you must verify with your local electrical codes for approval.

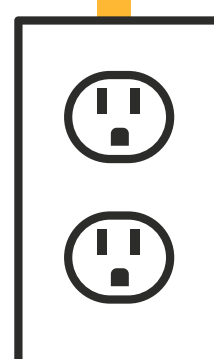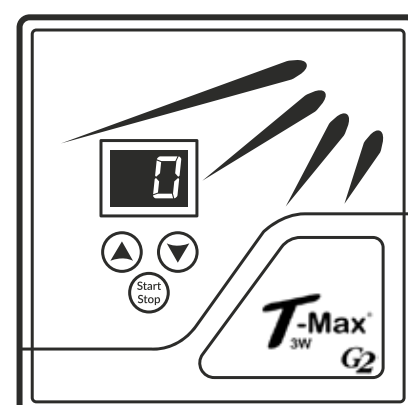

120V
20 Amp

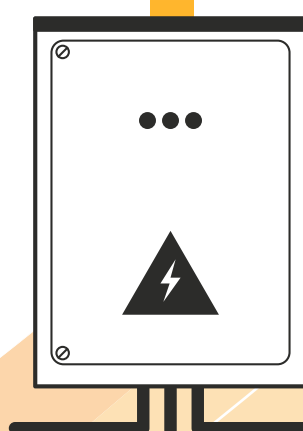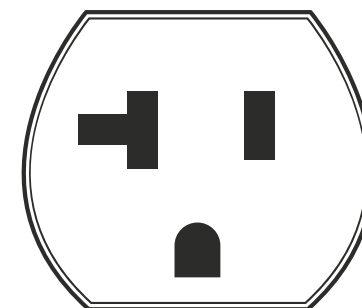

Contact Us

727.825.0400

support@prosun.com

ProSun
INTERNATIONAL
innovative wellness solutions